


Sensor Installation Header

Part: Hdr_CO_F,
Conductivity, Temperature & Flowswitch
Scaled 4:1 Rev 7/99

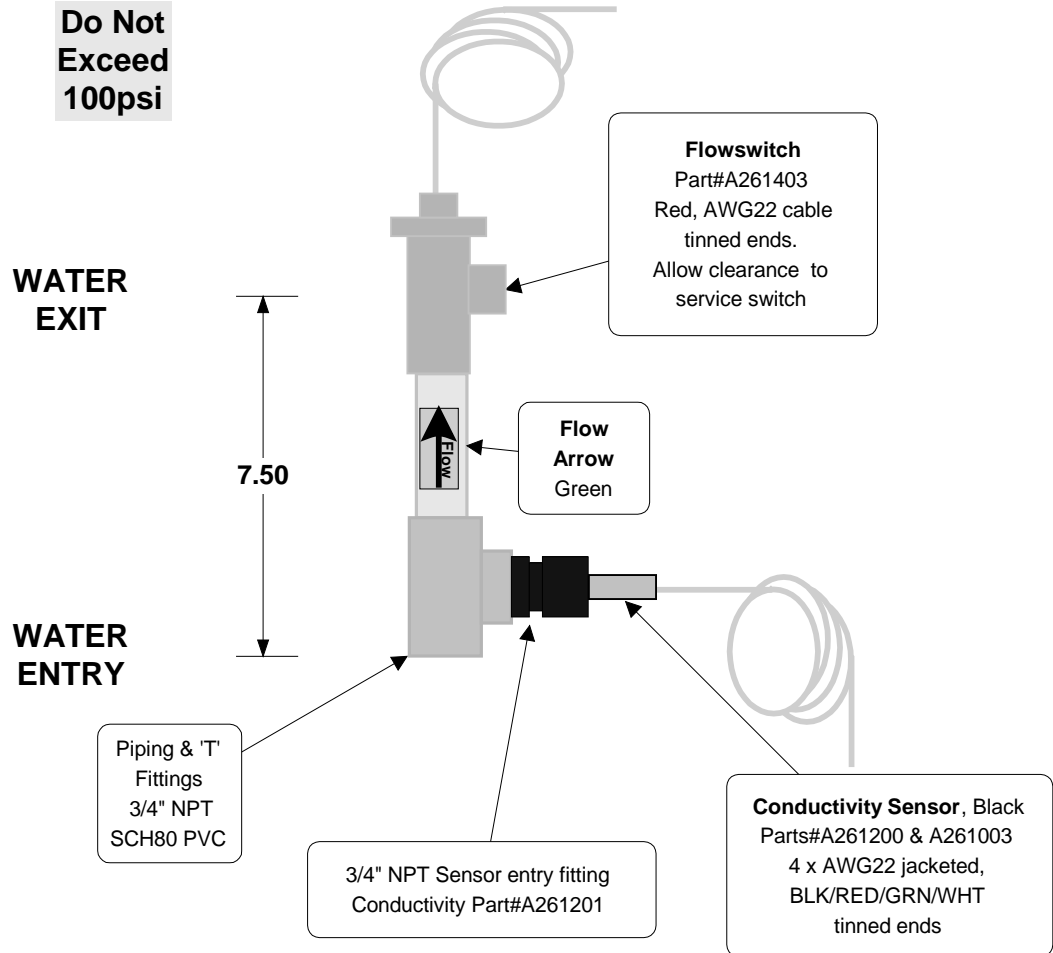

INSTALLATION

1. Vertical orientation required for flowswitch operation.
2. Allow 6" top clearance for flowswitch maintenance.
3. Entry & Exit both 3/4" NPT, threaded.

Drawing: Hdr_CO.vsd